

7 inch wide screen, TFT Color LCD type

Graphic touch panel GP-S070


NEW

■ Features

- Adopts 7 inch wide TFT LCD for realizing True Color with 16,777,216 colors
- Analog touch method
 - : Free tag arrangement than matrix touch method
- Data logger function
 - : Supports data gathering and backup of controller
- Supports variable image library
- Enables to monitor multi station and multi channel at the same time
- Supports several interface
 - : Supports USB Host/Device to high speed download and manage files
 - : Easy to connect various external devices with RS232C 2 ports and RS232C/RS422 multi-communication port
- Supports several fonts: Supports window true type and several bitmap fonts (selectable)
- Device monitoring function
 - : Enables to monitor/control variable of connected control through communication port
- Easy S/W upgrade at website
 - (1) GP firmware file
 - (2) GP Editor (drawing program)
 - (3) Additional protocol
 - (4) Language and font, etc
- Connects printer/barcode reader: Enables to print out alarm history, to read barcode



7 inch TFT Color LCD

 Please read "Caution for your safety" in operation manual before using.



■ Manual

Visit our webwite(www.autonics.com) to download 'GP Editor user manual' or 'GP, LP user manual for communication', 'GP-S070 user manual'.


- **GP Editor user manual**
It describes how to write screen data, and is about related usage of GP-S070 HMI function.
- **GP, LP user manual for communication**
It describes connection for external devices such as PLC.
- **GP-S070 user manual**
It describes general information on the installation and usage of GP-S070 and system contents.

■ Ordering information

| Model | Item | Series | Monitor size | Display unit | Color | Power supply | Interface |
|--------------|---------------|----------|--------------|---------------|------------------|--------------|---|
| GP-S070-T9D6 | Graphic panel | S series | 7 inch | TFT Color LCD | 16,777,216 color | 24VDC | RS232C, RS422, USB HOST, USB DEVICE, Ethernet |
| GP-S070-T9D7 | | | | | | | RS232C (2EA), USB HOST USB DEVICE, Ethernet |

- (A) Photo electric sensor
- (B) Fiber optic sensor
- (C) Door/Area sensor
- (D) Proximity sensor
- (E) Pressure sensor
- (F) Rotary encoder
- (G) Connector/Socket
- (H) Temp. controller
- (I) SSR/Power controller
- (J) Counter
- (K) Timer
- (L) Panel meter
- (M) Tacho/Speed/ Pulse meter
- (N) Display unit
- (O) Sensor controller
- (P) Switching mode power supply
- (Q) Stepper motor& Driver&Controller
- (R) Graphic/Logic panel
- (S) Field network device
- (T) Software
- (U) Other

■ Specifications

| | | |
|-----------------------------|--|---|
| Model | GP-S070-T9D6 | GP-S070-T9D7 |
| Power supply | 24VDC | |
| Allowable voltage range | 90 to 110% of power supply | |
| Power consumption | Max. 7.2W | |
| Display performance | LCD type | 7 inch TFT Color LCD |
| | Resolution | 800×480 dots |
| | Display area | 152.4mm×94.44mm |
| | Color | 16,777,216 color |
| | LCD view angle | Within each 50°/ 60°/ 65°/ 65° of top/bottom/left/right |
| | Backlight | White LED |
| | Brightness | Adjustable by software |
| Graphic drawing performance | Language※1 | English, Korean |
| | Text | • Vector font • 6×8, 8×8 ASCII character, high definition numbers • 8×16 ASCII characters, 16×16 regional characters(1 to 8 times bigger for width, 0.5 to 5 times bigger for height) |
| | Graphic drawing memory | 16MB |
| | Number of user screen | 500 pages |
| | Touch switch | Analog touch |
| Serial interface | Asynchronous method: Each port of RS232C, RS422 Each port of RS232C, RS422 Two ports of RS232C | |
| USB interface | Each of USB HOST, USB Device(Version 1.1) | |
| Ethernet interface | IEEE802.3(U), 10/100Base-T | |
| Real-time controller | RTC embedded | |
| Battery life cycle | Approx. 3 years at 25°C | |
| Insulated resistance | Min. 100MΩ(at 500VDC megger) | |
| Ground | 3rd grounding(max. 100Ω) | |
| Noise resistance | ± 0.5kV the square wave noise(pulse width: 1μs) by the noise simulator | |
| Withstanding voltage | 500VAC 50/60Hz for a minute | |
| Vibration | Mechanical | 0.75mm amplitude at frequency of 10 to 55Hz(for 1 min.) in each of X, Y, Z directions for 1 hour |
| | Malfunction | 0.5mm amplitude at frequency of 10 to 55Hz(for 1 min.) in each of X, Y, Z directions for 10 min. |
| Shock | Mechanical | 300m/s ² (approx. 30G) in each of X,Y,Z directions for 3 times |
| | Malfunction | 100m/s ² (approx. 10G) in each of X,Y,Z directions for 3 times |
| Environ-ment | Ambient temperature | 0 to 50°C, storage: -20 to 60°C |
| | Ambient humidity | 35 to 85% RH, storage: 35 to 85%RH |
| Protection | IP65F for front panel | |
| Accessory | Fixing bracket: 4EA, Battery(included) | |
| Approval | CE  | |
| Unit weight | Approx. 520g | |

※1: Language can be customized.

※Environment resistance is rated at no freezing or condensation.


■ Functional description

| | | |
|-----------------------------|--|--|
| Figure display | Line, rectangle, circle, text, bitmap | |
| Tags | Numeral display | Displays the designated device as numerical value.(decimal, hexadecimal, octal, binary, real number) |
| | ASCII display | Displays the designated device value as ASCII character. |
| | Time display | Displays current time or date. |
| | Alarm history | Registers alarm history. |
| | Alarm list | Displays generated (not backed up) alarm. |
| | Comment display | Displays the designated comment as device status or value. |
| | Lamp | Displays lamp as device status. |
| | Part display | Displays the designated parts as device status and value. |
| | Line graph | Displays several device values with a graph of broken line. |
| | Trend graph | Displays change of device value for time with a graph of broken line. |
| | Bar graph | Displays a device value with a bar graph. |
| | Statistic graph | Displays a ratio of several device values with pie graph. |
| | Panel meter | Displays a device value as panel meter. |
| | Touch key | Screen is switched, word/bit device values are set when it touched. |
| | Numeral input | Configures user input value in device. |
| ASCII input | Configures user input ASCII code value in device. | |
| System information function | Monitors/Controls GP operation from PLC. | |
| Recipe function | Reads/Writes several PLC device collectively. | |
| Security function | Only acceptable user can observe/operate important data. | |
| Barcode read function | Connects barcode reader, read barcode. | |
| Floating alarm function | Warning message is floated when alarm is generated. | |
| Time operation | Specific bit device is ON/OFF for designated day and time. | |
| Overlap window | Available to form dynamically overlapping another base screen on the base one. | |
| Observe status function | Changes PLC device status/value of PLC when trigger is generated. | |




Graphic Panel

■ Dimensions

(unit : mm)

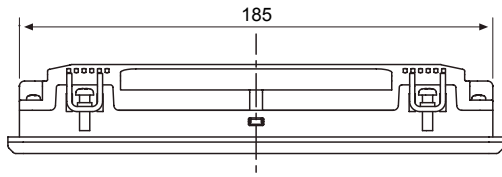


● Panel cut-out

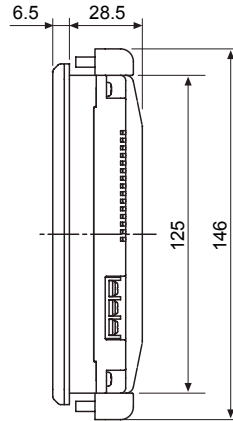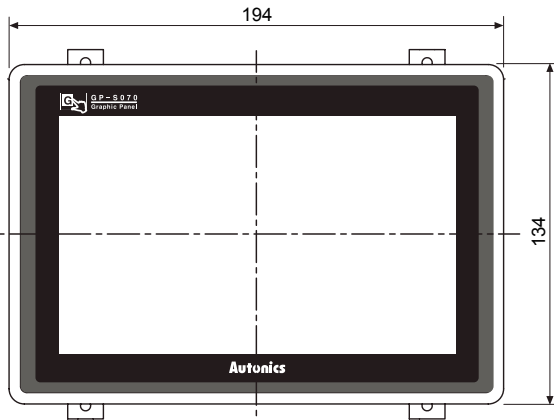
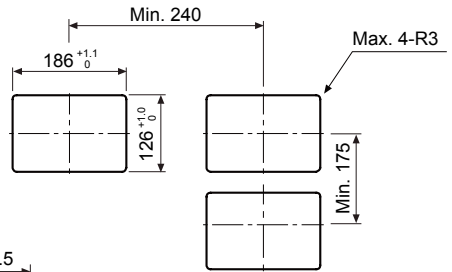


※Panel thickness : Max. 4mm

● Fixing bracket

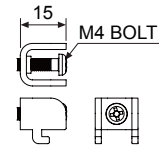

■ Part description

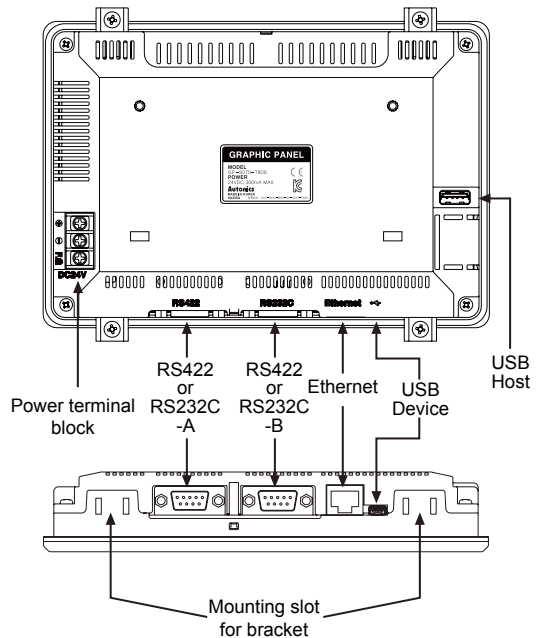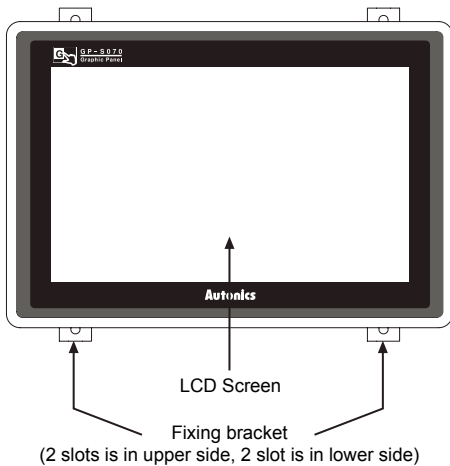


- Ethernet Port: For connecting LAN cable and hub, use direct cable, and for connecting PC directly, use cross cable.
- USB Device: It is used to upload and download project (it is required to install USB driver on PC), and when connect to PC, it can be used as a USB memory (PC recognizes it as a removable disk).
- USB Host: It is used to manage data and upgrade firmware.
- RS232C, RS422 ports: For more information, refer to R-32 page and 'Serial interface' of GP/LP common features.

| | |
|-----|----------------------------------|
| (A) | Photo electric sensor |
| (B) | Fiber optic sensor |
| (C) | Door/Area sensor |
| (D) | Proximity sensor |
| (E) | Pressure sensor |
| (F) | Rotary encoder |
| (G) | Connector/Socket |
| (H) | Temp. controller |
| (I) | SSR/ Power controller |
| (J) | Counter |
| (K) | Timer |
| (L) | Panel meter |
| (M) | Tacho/ Speed/ Pulse meter |
| (N) | Display unit |
| (O) | Sensor controller |
| (P) | Switching mode power supply |
| (Q) | Stepper motor& Driver&Controller |
| (R) | Graphic/ Logic panel |
| (S) | Field network device |
| (T) | Software |
| (U) | Other |


GP-S070

■ Installation

1. Set GP-S070 in panel.
2. Set fixing brackets in 4 slots(2 slots is in upper side, 2 slots is in lower side).

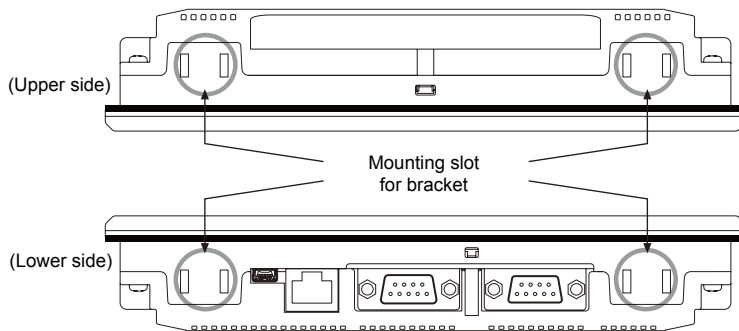

3. Tighten fixing bracket with M4 Screw driver and tightening torque is 0.3 to 0.5N·m.

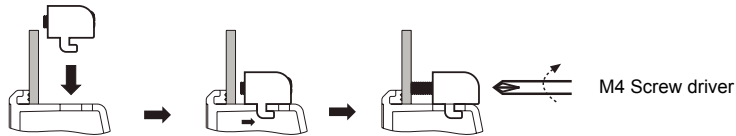

■ Sold separately

Transmission cables connectable into external devices such as PLC are sold separately. (refer to the R-32 page for "GP/LP communication cable".)