
TPS20 Series

Features

- DC4-20mA analog signal (2-wire) transmission by measuring pressure of liquid, gas, and oil.
- High accuracy (±0.3% F.S.) with stainless steel diaphragm for various measurement
- Various model for installation environments
 Head type, DIN connector type, connector cable type
- Built-in zero-point, span adjustment (head type)

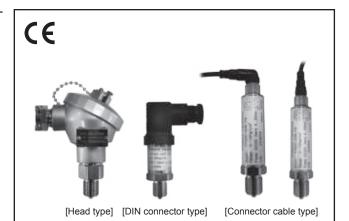


Please read "Safety Considerations" in operation manual before using this unit.

Ordering Information

TPS20 - G 1	5 F8	(0 to 5kgf/cm ²)			
1 2 3	4 5	6			
	Descriptio	on			
1) Item	TPS20	Pressure Transmitter	Pressure Transmitter		
	G	Gauge pressure	Gauge pressure		
② Measurement presssure	A	Absolute pressure	Absolute pressure		
	1	Head type	Head type		
3 Cable	2	DIN connector type	DIN connector type		
	3	Connector cable type	Connector cable type		
		Gauge pressure	Absolute pressure		
	1	0 to 0.2kgf/cm ²	—		
	2	0 to 0.5kgf/cm ²	—		
	3	0 to 1kgf/cm ²	0 to 1kgf/cm ²		
	4	0 to 2kgf/cm ²	0 to 2kgf/cm ²		
	5	0 to 7kgf/cm ²	0 to 7kgf/cm ²		
	6	0 to 10kgf/cm ²	0 to 10kgf/cm ²		
	7	0 to 20kgf/cm ²	0 to 20kgf/cm ²		
	8	0 to 35kgf/cm ²	0 to 35kgf/cm ²		
	9	0 to 70kgf/cm ²	—		
Pressure range	A	0 to 100kgf/cm ²			
	С	0 to 200kgf/cm ²			
	F	0 to 300kgf/cm ²	<u> </u>		
	Н	0 to 350kgf/cm ²	—		
	Μ	-760mmHg to 0kgf/cm ²	<u> </u>		
	0	-760mmHg to 1kgf/cm ²	—		
	Q	-760mmHg to 7kgf/cm ²			
	V	-760mmHg to 10kgf/cm ²			
	Х	-760mmHg to 20kgf/cm ²	<u> </u>		
	Y	-760mmHg to 35kgf/cm ²			
	Z	Others			
	P2	R1/2 (with adapter, PT)			
Drocouro port	P8	R3/8 (with adapter, PT)			
5 Pressure port	F8	G3/8 (standard, PF)			
	ZZ	Others			
O User pressure range		User pressure range ^{*1}			

** 1: Write the desired pressure range and it is the default of user pressure range. (select "Z" at ④Pressure range)
 ** For ordering cable, order as CID3-2, CID3-5, CLD3-2, CLD3-5. (sold separately)

Pressure Transmitter

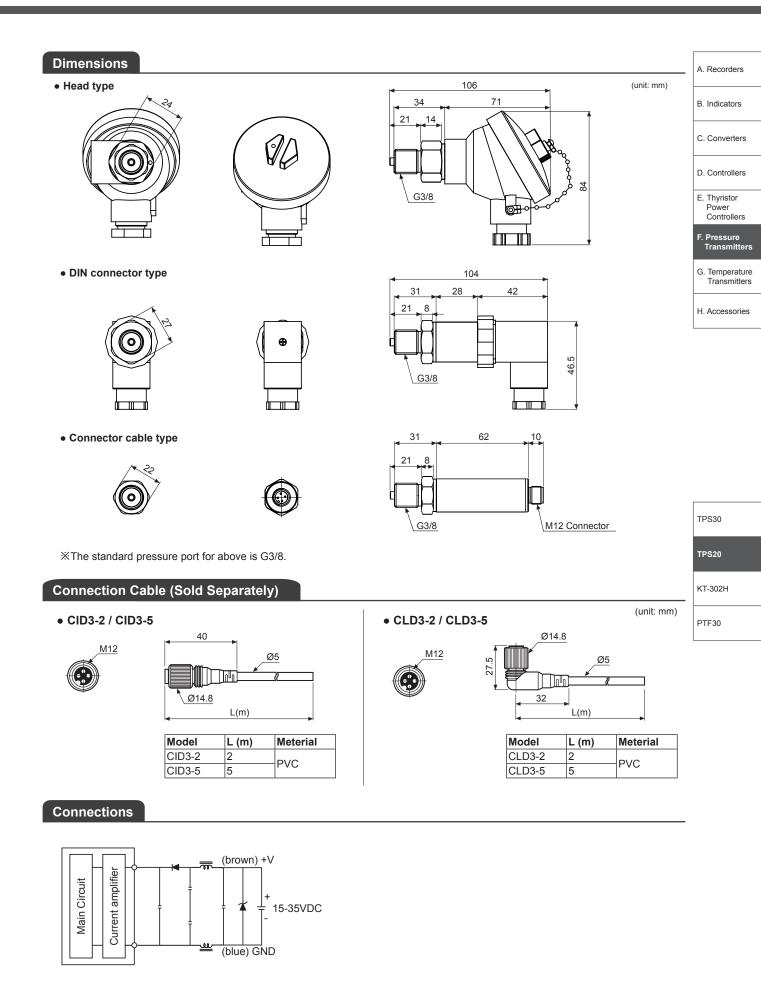

TPS20 Series

Connector


Head type		DIN connector type			Connector cable type	•	
SPAN ZERO	Pin		Pin	Function		Pin	Function
			1	+		1	+
	+		2	-		2	N·C
			3	N·C		3	F.G.
	-		÷	F.G.		4	-

KRN100

XIn case of head type, remove the top cover.



• Example of external connections

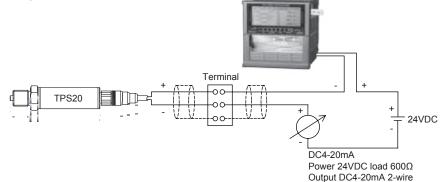

Specifications

Series		TPS20				
Pressure type		Gauge pressure	Absolute pressure	Compound pressure		
Rated pressur		0 to 0.2 to 350kgf/cm ²	0 to 1.0 to 35kgf/cm ²	-760mmHg to 0 to 30kgf/cm ²		
Max. pressure	-	300% of max. span		5 5		
Measured mat	0	Liquid, gas, oil (except corrosive environment of stainless steel type 316)				
Power supply		15-35VDC				
Permissible vo	oltage range	90 to 110% of rated voltage				
Current consu		Max. 50mA				
Response time	e	Max. 100ms				
Protection circ		Reverse polarity protection circuit				
Current output	t	DC4-20mA				
Linearity		±0.3% F.S. (-10 to 50°C), ±0.5%F.S. (50 to 70°C)				
Hysteresis		±0.3% F.S.				
Temp. Zero Sl	hift	±0.03% F.S.				
Temp. Span S	Shift	±0.03% F.S. (at 25°C)				
Load resistand	ce	Max. 600Ω				
Insulation resi	stance	Over 100MΩ (at 500VDC m	egger)			
Dielectric strer	ngth	500VAC 50/60Hz for 1 minute				
Vibration		1.5mm amplitude at frequency of 10 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours				
Shock		95m/s ²				
Tightening tor	que	Industrial plug over 5N				
Pressure port		G3/8t (standard), R3/8, R1/2	2			
Environment	Ambient temp.	-10 to 70°C, storage: -10 to 70°C				
Environment	Ambient humi.	5 to 95% RH, storage: 5 to 95% RH				
Materials	rials Sealing, diaphragm, connection: stainless steel type 316, O-ring: fluoro rubber			ring: fluoro rubber		
Connection	ion +, -					
Case structure	Case structure Drip-proof structure					
Approval		CE				
Weight ^{×1} Approx. 350g (approx. 320g) (based on head type)						

X F.S.(Full Scale): It is rated pressure range.

× Environment resistance is rated at no freezing or condensation.

Troubleshooting

Error	Troubleshooting		B. Indicators
No outputs	Check the power supply.		D. malcators
	Check the polarity (+, -) when wiring cable.		
	Check the connection part.		C. Converters
	Check the power supply.		
Abnormally fluctuating output	Check the supplied pressure.		D. Controllers
	Check the pressure line.		D. Controllers
	Check the power supply.		E. Thyristor
Out of zero point output value	Check the load resistive value of current output type for a receiver is over 600Ω .		Power
	Check the measuring point and transmission distance.		Controllers
	Check the line resistance is below 600Ω.		F. Pressure

Proper Usage

- When installing the unit on pipe line, use t he hexagon part of connections not to turn the unit with a pipe wrench. Do not use the unit with strong vibrations.
- This unit is manufactured with precisely. If you drop or shock the unit, it may lose the function. Please treat the unit carefully.
- Store the unit at the place without moisture, dust, and vibration.
- This product which does not have drive part at sensing part does not need to repair it. Even though inside of pressure pipe is normally clean, it needs to take maintenance once a year as below instructions.
 - ① Check the broken status of outside.
 - ② Check the pressure slot, cleanliness inside, and corrosion state.
 - ③ Short each terminal and check the insulation resistance between the case and power. (at 100VDC, over 10MΩ)
 - ④ Check zero, span adjustment and linearity by pressure standards.
- When removing a sensor for maintenance, follow the below instructions.
 - ① Replace an O-ring which is used once.
- ② Be sure that diaphragm part is not damaged.
- In case of head type for connecting the power, use a crimp terminal. (M3.5, max. 7.2mm)

- The connection of this unit should be separated from the power line and high voltage line in order to prevent inductive noise.
- Install a power switch or a circuit breaker to supply or cut off the power.
- · Connect the power with the crimp terminals.
- Switch or circuit breaker should be installed nearby users for convenient control.
- Do not use the unit near the high frequency instruments (high frequency welding machine & sewing machine, large capacity SCR controller).
- The unit cannot be repaired due to disassembled structure.
- The unit is fixed with bolt and nut at the both sides of case. Do not press excessive load (approx. 300kg/cm²), or it may cause damage to the unit.
- Do not pull the cables with over 30N of tension force.
- Tighten the cable connection part firmly not to enter water to the cable.
- This product may be used in the following environments.
 - Indoor / Outdoor
 - ② Altitude max. 2,000m
 - ③ Pollution degree 2
 - ④ Installation category II
- We are not responsible for any damages and claims for careless. Must read the proper usage.

A. Recorders

Transmitters G. Temperature Transmitters

H. Accessories